



MAXSTAR APPLIANCE LIMITED

1/7, West Patel Nagar, Opposite Pillar No. - 205, New Delhi - 110008

Tel: 08882650660, 011-2588 5791; e-mail: customercare@maxstar.in; Website: www.maxstar.in




PERSONAL BLENDER

INSTA MIX

USER MANUAL

Please read this book carefully before using this appliance.

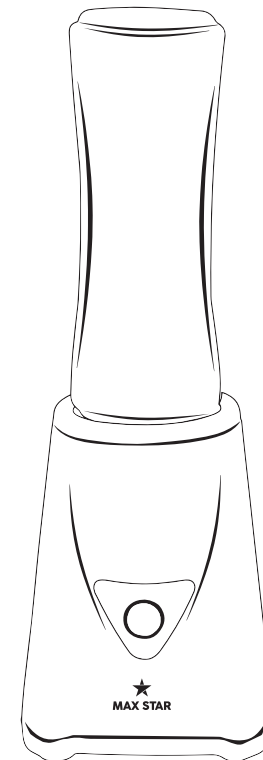

1. BPA Free Tritan Bottle
2. Blade Cap with stainless steel blades
3. Pulse Button
- 4 . 350W Motor Base
5. Secure Screw On Lid x 2
6. Additional BPA FREE Tritan Bottle



Note: there are rubber seals located under the screw-on lids and inside the blade cap to Prevent leakage. if these seals become loose and come out ,pls wash them in warm soapy Water, rinse and then dry thoroughly ,please place them correctly back into the screw-on lids Or blade cap before using the Smoothie Maker. please contact After –Sales Support by using The contact detail provided at the bottom of this page if further instructions are required .

Improtant safety instructions

When using el ectrical appliances, to reduce the risk of personal injury or damage to Property, basic safety precautions must be observed, including the following:

- Read carefully and save all instructions provided with this appliance.
- Always turn the power off at the power outlet before you insert or remove the plug Remove by grasping the plug-do not pull on the cord.
- This appliance is not intended for use by persons (including children)with reduced Physcal , sensory or mental capabilities ,or lack of experience and knowledge ,unless They have been given supervision or instruction concerning the use of the appliance By a person responsible for their safety.
- Only connect the appliance to a power outlet of the same voltage (AC only) as that Maked on the rating plate of the appliance.
- Do not use your appliance with an extension cord unless this cord has been checked And tested by a qualified technician or service person.
- To protect against risk of electric shock, do not immerse the cord, plug or base in water Or any other liquid.
- Never leave the appliance unattended while in use.
- Close supervision is necessary when any appliance is used by or near children.
- Turn the power off and unplug from the power outlet when not in using , before putting On or taking off parts, or before cleaning .
- Do not use the appliance for any purpose other than its intended use.
- Do not place the appliance on or near flammable or hot objects.
- Avoid contact with moving parts .
- Do not operate any electrical appliance if the power cord is damaged or after the Appliance has been dropped or damaged in any way .if damage is suspected . Contact after –sales support .
- Do not operate appliance with hands .
- Do not palce hot or boiling liquids into the smoothie maker, all liquids should be at Room temperature or cooler before placing into the bottle.
- do not use outdoors.
- do not let the power cord of appliance hang over the edge of a table or bench Or touch any hot surfaces.
- some appliances are sealed using tamperproof screws to avoid tampering /maintenance By unskilled or unqualified persons and also for safety reasons.
- Do not attempt to repair ,disassemble or modify the appliance.
- Do not use chemical ,steel wool or abrasive cleaners to clean the appliance.
- Ascraper may be used ,however this can only be used when the smoothie maker is not running.
- Blades are sharp.habdle carefully.
- Never cover the appliance when it is in operation.
- This appliance is intended for processing small quantities of food for immediate Consumption ,this appliance is not inteded to preparte large quantities of food at On time
- To reduce the risk of injury ,never place the blade cap on the motor base without Frist properly attaching the bottle.
- The screw-on lid needs to be firmly screwed onto the bottle or there may be a risk Of leakage.
- Do not attempt to tamper with the cover interlock ,mechanism.
- This appliance is for household, indoor use only.
- Only use the appliance for domestic purpose .
- This appliance should be used intermittently, do not allow the smoothie maker to Run when it is empty or become overloaded.
- Ashort power supply cord is provided to reduce the risk of becoming entangled or Tripped over, which may occur with a long cord.
- **WARNING:** the blade is very sharp,caution should be taken when cleaning and Disassembling the smoothie maker.
- The ingredients that are put in the blending cup should not exceed 600ml.
- Always operate the product on a flat, level, stable surface.

- Do not submerge the unit in water or other liquids as this may cause electrical Failure and damage to the electrical components.
- Do not place carbonated drinks into the smoothie maker as this may cause damage To the bottle ,blade cap and motor base.
- Do not place any parts of the smoothie maker into a microwave.
- Only place the bottle, drinking lid and blade cap in the top basket of a dishwasher And run the dishwasher on a cool , gentle cycle only.
- Do not place the motor base in a dishwasher.

WARNING : Do not over-tighten the blade cap onto the bottle. Over-tightening of the blade Cap may cause damage to the smoothie maker and will make the bottle difficult to remove

WARNING

- To reduce the risk of electric shock , do not immerse or expose the products , Flexible cord or plug to rain, moisture or any liquid.
- Do not use the product near baths, basins or other vessels containing water Or other liquids, or when standing is or on damp or wet surfaces.
- In the event that the appliance is dropped into water ,turn off the power at The power outlet and remove the plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISSCONNECTED FROM THE POWER OUTLET.

- It is important to note that the appliance will have to be inspected by a qualified Technician before using it again

Instructions

Getting started

- ensure the bottle is not filled with food or liquids past the maximum capacity level Marking ,do not operate the smoothie maker when it is empty.
- ensure close supervision when being used around children
- it is recommended to have all ingredients prepared before switching on the smoothie Maker .
- do not place hot or boiling liquids into the smoothie maker, all liquids should be at Room temperature or cooler before placing into the bottle.
- do not place carbonated drinks into the smoothie maker as this may cause damage To the bottle ,blade cap and motor base.


Using the Smoothie Maker

- place the smoothie maker base onto a flat stable surface .

- using the recipes provided (see page 11 or 12) or your own ,place the ingredients into the smoothie maker ,ensure any solid ingredients such as fruit or vegetables are cut into small pieces no larger than 2cm., it is recommended that any solid ingredients are added before adding liquid ,**be careful not to fill past MAX line**
- once ingredients have been put in , screw the blade cap (2) on to bottle with the blade facing into the bottle,to lock,twist the blade cap (2) anti-clockwise, ensure not to over-tighten the cap (fle.1)
WARNING: do not over –tighten the blade cap (2) onto the bottle. Over-tightening of The blade cap may cause damage to the smoothie maker and will make the bottle difficult to remove



- once the blade cap(2) is screwed into place,turn the bottle upside down and again the arrow on the blade cap(2) with the arrow on the motor base (4). Twist bottle anti-clock wise to lock into place (Fig.2)
- plug the smoothie maker into a standard 220-240volt AC electrical outlet and turn the power on at the wall socket ,a blue light will illuminate around the pulse button (3)
- hold down the pulse button(3) for 30 second intervals, or until your ingredients reach the desired consistency . pulsing for 1 minute requires 2 minute rest period alternatively once you have aligned the arrow on the blade cap(2) with the arrow on the motor base(4) press the bottle (1) down and hold down the pulse button (3) to active blending.
- when all ingredients are combined ,release the pulse button (3) on the until and turn the smoothie maker off at the power outlet ,remove the bottle(1)from the motor base (4) by turning it clockwise and tip it upside down, unscrew the blade cap(2) and set it Aside ,(Fig.3)
- to convert the smoothie maker bottle (1) to an on-the –go –bottle. Simply attach the included lid(5) and screw on to tighten.your smoothie maker is now ready to drink but is also portable and can taken anywhere (Fig.4)

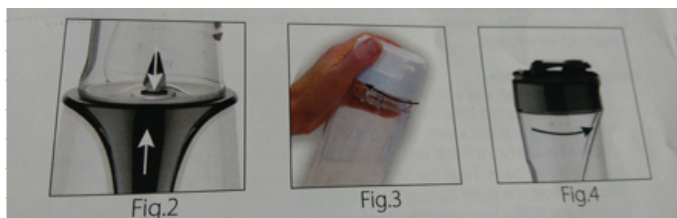

Note: if ingredients become stuck around the blade during pulsing, unlock the bottle from the motor base, shake it gently to dislodge the ingredients, then lock it back into the base before continuing pulsing.

Crushing Ice

The smoothie maker can be used to crush small amounts of ice (2 to 3 cubes at a time). Always add a small amount of liquid into the smoothie maker along with the ice before pressing the pulse button, the liquid can be water or milk or one of the other liquids mentioned in the recipes on page 11 and 12.

Cleaning and Maintenance

- ensure that the unit is turned off and unplugged before attempting to clean the unit.
- blades are sharp-handle with care.
- some foods may discolour the plastic, this is perfectly normal and won't harm the plastic or affect the flavour of the food. the discolouration may be removed with vegetable oil.
- wash the blade cap, lid and bottles in warm soapy water. these parts are dishwasher safe. As long as they are placed in the top basket and the dishwasher is run on a cool, gentle cycle.
- rinse well. Ensure that all parts are dried thoroughly before storing.
- do not immerse the base unit, power cord or mains plug in water or any other liquids. If cleaning of the base unit is required, use a damp cloth and dry well.

NOTE: there are rubber seals located under the screw-on lids. And inside the blade cap to

prevent leakage. if these seals become loose and come out, please wash them in warm soapy water, rinse and then dry thoroughly, please place them correctly back into the smoothie maker. Screw-on lids or blade cap before using the smoothie maker, please contact After Sales Support by using the contact detail provided at the bottom of this page if further instructions are required.

Quick Cleaning Guide

- fill the bottle half way with warm tap water and a drop of detergent.
- screw the blade cap onto the bottle with the blade facing into the bottle.
- twist the cap anti-clockwise. Ensure not to over-tighten the cap.
- once the motor base. Twist the bottle anti-clockwise to secure into place.
- press and hold the pulse button for 10 seconds.
- remove the bottle, unscrew the blade cap and rinse both under running water.
- dry thoroughly before using again.

Recipes

Combine all ingredients as per "using the smoothie maker" (page 6), if one of the recipes below is too thick for your liking just add additional liquid, but only add to the max level. All measurements below should only be used as a guide,

Go Green Smoothie

- 250 grams spinach leaves
- 1 pear, cored and chopped into 1cm cubes
- 20 green or red grapes
- 125 grams greek yoghurt

Mixed Berry Smoothie

- 250 grams mixed berries (either fresh or frozen)
- 125 grams plain or greek yoghurt
- add enough soy milk, almond milk or Skimmed milk to fill the bottle to the max level
- honey to taste

- . 1 tbsp peanut butter
- . 250 grams spinach
- . 1 banana, peeled and choppen into 1cm cubes
- . 5 strawberries, chopped into 1cm cubes
- . add enough soy milk , almond milk or skimmed milk to fill the bottle to the max level
- . sprinkle cinnanmon on top to serve

Tropical Smoothie

- . pulp of 3passion fruits or 125 grams tinned passion fruit pulp
- . 1 banana, peeled and chopped into 1cm cubes
- . 1 smal mango,peeled and chopped into 1cm cubes
- . add enough orange juice to fill the bottle to the max level
- . serve with ice cubes and a mint leaf

Envrionment Friendly Disposal

Correct disposal of this product

This Wheeled Bin symbol indicates that this procucts should Not be disposed of with other household wastes, to prevent Possible harm to the environment or human health from Uncontrolled waste disposal, recycle it responsibly to promote The sustainable recycling of material resources. Contact your Local authortity for recycling failities in your area.

SPECIFICATIONS

TYPE	PB-01
RATED VOLTAGE	230 V
RATED FREQUENCY	50Hz
RATED POWER	350W



MAX STAR

PERSONAL BLENDER

INSTA MIX

RATING : 230V,50 HZ

POWER : 350W



WARRANTY CARD

WARRANTY

(As per terms and conditions overleaf)

Name of Purchaser : _____

Address : _____

Phone No. Residence : _____

Office : _____

Product Sl. No. : _____ Date Of Purchase : _____

Customer's Signature	Dealer's Stamp & Signature

MAXSTAR APPLIANCE LIMITED

1/7, West Patel Nagar, Opposite Pillar No. - 205, New Delhi - 110008

Tel: 08882650660, 011-2588 5791; e-mail: customercare@maxstar.in; Website: www.maxstar.in

Please preserve the Warranty Card and Cash Memo and ensure that they are duly stamped and signed by the Company's dealer. The Warranty Card or a Cash Memo which is not stamped and signed by the dealer will be treated as invalid.

Max Star product that you have bought is of excellent quality and construction. However we will correct, free of charge any defects in material or workmanship for a period of one year* (the Warranty period) from date of purchase subject to the terms and conditions.

TERMS & CONDITIONS OF WARRANTY

1. Max Star products are warrantied solely against poor workmanship, manufacturing defect and use of faulty material only. Consequential liabilities will not be entertained. All Max Star products are designed for domestic usage only.
2. In the event of a replacement of spares during the warranty period, this warranty card will be required along with the original tax invoice/ Cash Memo to process the claim. The Company will not entertain a claim with incomplete warranty details.
3. This warranty is confined to the first purchaser of the product only & is not transferable.
4. Repair or replacement of spares will be carried out through the Company's Authorized Service Centre or its Authorized Dealers.
5. Repairs during warranty period shall be carried on "Carry In" basis, wherein, for services, the purchaser shall bring the product to the Company's Authorized Service Center / Authorized Dealer for warranty service along with Tax Invoice / Cash Memo and Warranty Card. The warranty does not cover cost of transportation of product from the customer's place to the Company's Authorized Service Centre/ Authorized dealer. However, in case the customer located beyond the municipal limits of the jurisdiction of the Company's Authorized Service / Authorized Dealers, wishes the Company / its Authorized Service Center/ Authorized Dealer to collect the product from his place for the purpose of servicing the product then all expenses incurred in collection and delivery back of the product, as well as the expenses incurred in connection with deputing of service personnel / technicians towards to and for travel, conveyance and other incidentals etc. will be borne by the customer.
6. In the event of repairs / replacement of any part/s of the product, this warranty will be thereafter continue and remain in force only for the unexpired period of the warranty. Moreover, the time taken for repair/ replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period. The customer shall have to pay a visit charge towards inspection, as applicable.
7. The Company / its Authorized Service Centre/ Authorized Dealer, reserves the right to retain any parts or component/s replaced at its/their discretion in the event of a defect noticed in the equipment during the warranty period. The company shall have exclusive right to replace the defective / unserviceable part/s or component/s with the part/s or component/s which may be new or refurbished.
8. The warranty does not cover accessories external to the product.
9. The warranty does not cover demonstration/installation of the product purchased.
10. In the event of any unforeseen circumstance, and spares not being available, the Company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
11. The warranty is issued at Delhi and Courts at Delhi shall have exclusive jurisdiction over matters covered or flowing from this warranty.
12. The Company's obligation under this warranty shall be limited to repairing or providing replacement of parts, which are found to be defective.
13. In the event of repairs/replacement of specific parts on which warranty is more is more than product warranty, the specific parts will be repaired /replaced free of the cost but customer needs to pay service charges in such cases.

THIS WARRANTY IS NOT APPLICABLE IN ANY OF THE FOLLOWING CASES:

1. The warranty card is not duly filled by the selling dealer.
2. The completed warranty card is not presented to the service personnel at the time of repair.
3. The product is not purchased from an Authorized MAX STAR dealer.
4. The product is not installed, used and maintained according to instruction given in the instruction manual.
5. Defect cause by improper use as determined by the company personnel.
6. Installation/ repair work is carried out by persons/agency other than Authorized by the company.
7. Defects have been caused by reasons beyond control of the Company, like act of God, during transit to Service Centre or purchaser's residence, poor maintenance, damage to the product caused by insects/ rodents.
8. The warranty does not apply to :
 - a. Surface coating, body aesthetics, plastic parts, neon lamps, bake light part, rubber/neon parts, cord wire, push button & bulb and durable parts viz. shaft, bush etc.
 - b. Normal wear and tears of parts.
 - c. Damages resulting from accidents, mishandling, improper use or negligence on the part of customer and fluctuation in supply voltage.
 - d. Damages resulting due to usage of power supply other than specified 230 Volts AC 50 Hz. e.g. inverters, generator etc.
 - e. For humming noise generated due to usage of electronic fan regulators of any make.
 - f. Breakage of glass parts.
 - g. Heating tubes/rods for failure or breakage.