



MAXSTAR APPLIANCE LIMITED

1/7, West Patel Nagar, Opposite Pillar No. - 205, New Delhi - 110008

Tel: 08882650660, 011-2588 5791; e-mail: [customercare@maxstar.in](mailto:customercare@maxstar.in); Website: [www.maxstar.in](http://www.maxstar.in)



# STAND MIXER

EASY MIX

## USER MANUAL

Please read this book carefully before using this appliance.





## Description

1. Motor head
2. Locking Lever
3. Speed control button
4. 4.5L brushed stainless steel bowl
5. Dough hook
6. Beater
7. Whisk

A.



B.



# Safety instructions

1. Carefully read the instructions before using your appliance.
2. Switch off the appliance before fitting and removing the attachment.
3. Keep your fingers away from moving parts and the opening on the attachment.
4. Always ensure loose articles and clothing are secured before using pasta makers attachment.
5. Only use the appliance for its intended domestic use, the manufacture will not accept any liability if the appliance is subject to improper use or failure to comply with these instructions.
6. Never leave the appliance to run unsupervised, especially when young children or handicapped persons are present.
7. **Check that the voltage rating of the appliance does in fact match that of your electrical system.**  
**Any connection error will nullify the guarantee.**
8. The appliance must be plugged into an earthed electrical socket.
9. If you have to use an electrical extension lead, it must be earthed and you should make sure that no-one can trip over it.
10. Unplug the appliance as soon as you have finished using it and when you clean
11. Don't use your attachment and/or appliance if it has been damaged. You should contact an approved service center.
12. Any work on the appliance other than normal care and cleaning by the customer must be carried out by an approved service center.
13. Do not immerse the appliance, the power cord or the plug in water or in any other liquid.
14. Do not allow the power cord to hang within the reach of children, to come close to or into contact with the hot parts of your appliance, any other source of heat or any sharp edge.
15. If the power cord or the plug are damaged, don't use your appliance .To avoid any risk, these must be replaced by an approved service center.
16. Do not put any accessories containing metal in a microwave oven.
17. Switch off the appliance and disconnected from supply before

changing accessories or approaching parts which move in use.

18. Do not touch the whisk, mixer blade or kneading hook while the appliance is in operation.
19. **Only use one attachment at a time , and make sure that other running parts have the cover prevent.**
20. **Do not operate the appliance for more than 5 minutes at one time. Allow 10 minutes rest before nextuse.**
21. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them form using itsafely.
22. Children should be supervised to ensure that they do not play with the appliance.

## Cleaning

1. Unplug the appliance.
2. Never immerse the motor until in water or put it under running water wipe it with a soft dry or slight damp cloth.
3. For easier cleaning, quickly rinse the accessories after use. Completely dismantle the mixer attachment. Handle the blades with care, as some have sharp cutting edges.
4. Wash , rinse and wipe the accessories or the can be put in the dishwasher.
5. If your accessories are discolored by food (carrots, oranges etc), rub them gently with kitchen towel dipped in cooking oil and then clean in the usualway.

# Using your appliance

(See figure A).

1. Before using for the first time, clean all parts of the accessories with soapy water .rinse and dry.
2. Lift the locking lever to lift the motor head and raise it to a vertical position
3. Fit the bowl onto the appliance by turning until it locks in position and place the ingredients in it.
4. Fit the desired accessory into the shaft, pushing the shaft and turn it a quarter turn towards you to lock it in position.

(See figure B).

5. Lift the locking lever again, and lower the motor head of the appliance to horizontal position until hearing a click sound.
6. Place the appliance on a flat, clean and dry surface and then plug in your appliance.
7. Start the operation according to processing guide
8. To stop the appliance, turn the knob (1) back to OFF.

## RECIPES

### Basic pasta dough

500g flour or plain flour

4 eggs

2.5ml salt

2.5ml oil

Water if necessary

### WHOLEMEAL PASTA

500g wholemeal flour

4 eggs

2.5ml salt

2.5ml oil

Water if necessary

### PASTA ROSSA

500g flour or plain flour

3 eggs

75g pureed tomato

2.5ml salt

2.5ml oil

Water if necessary

## Processing Guide

Accessory	Food	Maximum	Operation Time	Speeds
Whisk	Cream (with 38% fat)	250ml	10mins	5 - Max
	Egg white	12pcs (min. 3pcs)	3mins	5 - Max
Dough Hook	Flour	600g	5mins	Min - 2
	Salt	10g		
	Yeast	10g		
	Sugar	10g		
	Water	300g		
	Lard	20g		
Beater	Flour	150g	5mins	Min - 4
	Castor sugar	150g		
	Margarine	150g		
	Egg	3pcs		



**MAX STAR**

**STAND MIXER**

EASY MIX

RATING : 220-240V,50 HZ

POWER : 700W



**WARRANTY CARD**

# WARRANTY

(As per terms and conditions overleaf)

Name of Purchaser : \_\_\_\_\_

Address : \_\_\_\_\_

Phone No. Residence : \_\_\_\_\_

Office : \_\_\_\_\_

Product Sl. No.: \_\_\_\_\_ Date Of Purchase : \_\_\_\_\_

Customer's Signature	Dealer's Stamp & Signature

## MAXSTAR APPLIANCE LIMITED

1/7, West Patel Nagar, Opposite Pillar No. - 205, New Delhi - 110008

Tel: 08882650660, 011-2588 5791; e-mail: [customercare@maxstar.in](mailto:customercare@maxstar.in); Website: [www.maxstar.in](http://www.maxstar.in)

Please preserve the Warranty Card and Cash Memo and ensure that they are duly stamped and signed by the Company's dealer. The Warranty Card or a Cash Memo which is not stamped and signed by the dealer will be treated as invalid.

Max Star product that you have bought is of excellent quality and construction. However we will correct, free of charge any defects in material or workmanship for a period of one year\* (the Warranty period) from date of purchase subject to the terms and conditions.

### TERMS & CONDITIONS OF WARRANTY

1. Max Star products are warranted solely against poor workmanship, manufacturing defect and use of faulty material only. Consequential liabilities will not be entertained. All Max Star products are designed for domestic usage only.
2. In the event of a replacement of spares during the warranty period, this warranty card will be required along with the original tax invoice/ Cash Memo to process the claim. The Company will not entertain a claim with incomplete warranty details.
3. This warranty is confined to the first purchaser of the product only & is not transferable.
4. Repair or replacement of spares will be carried out through the Company's Authorized Service Centre or its Authorized Dealers.
5. Repairs during warranty period shall be carried on "Carry In" basis, wherein, for services, the purchaser shall bring the product to the Company's Authorized Service Center / Authorized Dealer for warranty service along with Tax Invoice / Cash Memo and Warranty Card. The warranty does not cover cost of transportation of product from the customer's place to the Company's Authorized Service Centre/ Authorized dealer. However, in case the customer located beyond the municipal limits of the jurisdiction of the Company's Authorized Service / Authorized Dealers, wishes the Company / its Authorized Service Center/ Authorized Dealer to collect the product from his place for the purpose of servicing the product then all expenses incurred in collection and delivery back of the product, as well as the expenses incurred in connection with deputing of service personnel / technicians towards to and for travel, conveyance and other incidentals etc. will be borne by the customer.
6. In the event of repairs / replacement of any part/s of the product, this warranty will be thereafter continue and remain in force only for the unexpired period of the warranty. Moreover, the time taken for repair/ replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period. The customer shall have to pay a visit charge towards inspection, as applicable.
7. The Company / its Authorized Service Centre/ Authorized Dealer, reserves the right to retain any parts or component/s replaced at its/their discretion in the event of a defect noticed in the equipment during the warranty period. The company shall have exclusive right to replace the defective / unserviceable part/s or component/s with the part/s or component/s which may be new or refurbished.
8. The warranty does not cover accessories external to the product.
9. The warranty does not cover demonstration/installation of the product purchased.
10. In the event of any unforeseen circumstance, and spares not being available, the Company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
11. The warranty is issued at Delhi and Courts at Delhi shall have exclusive jurisdiction over matters covered or flowing from this warranty.
12. The Company's obligation under this warranty shall be limited to repairing or providing replacement of parts, which are found to be defective.
13. In the event of repairs/replacement of specific parts on which warranty is more is more than product warranty, the specific parts will be repaired /replaced free of the cost but customer needs to pay service charges in such cases.

### THIS WARRANTY IS NOT APPLICABLE IN ANY OF THE FOLLOWING CASES:

1. The warranty card is not duly filled by the selling dealer.
2. The completed warranty card is not presented to the service personnel at the time of repair.
3. The product is not purchased from an Authorized MAX STAR dealer.
4. The product is not installed, used and maintained according to instruction given in the instruction manual.
5. Defect cause by improper use as determined by the company personnel.
6. Installation/ repair work is carried out by persons/agency other than Authorized by the company.
7. Defects have been caused by reasons beyond control of the Company, like act of God, during transit to Service Centre or purchaser's residence, poor maintenance, damage to the product caused by insects/ rodents.
8. The warranty does not apply to :
  - a. Surface coating, body aesthetics, plastic parts, neon lamps, bake light part, rubber/neon parts, cord wire, push button & bulb and dursable parts viz. shaft, bush etc.
  - b. Normal wear and tears of parts.
  - c. Damages resulting from accidents, mishandling, improper use or negligence on the part of customer and fluctuation in supply voltage.
  - d. Damages resulting due to usage of power supply other than specified 230 Volts AC 50 Hz. e.g. inverters, generator etc.
  - e. For humming noise generated due to usage of electronic fan regulators of any make.
  - f. Breakage of glass parts.
  - g. Heating tubes/rods for failure or breakage.